




Processing example: inner shape of watch crown

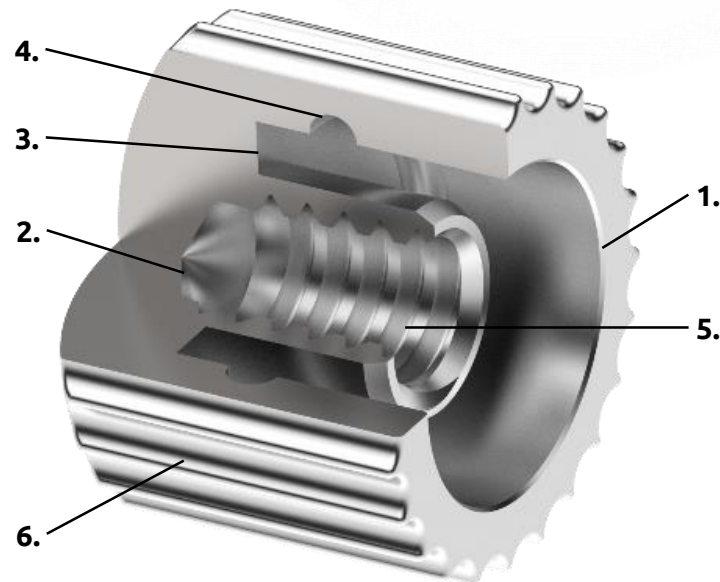


1. DRP - centering pointer

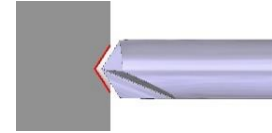


2. DRA - high performance chamfering drill

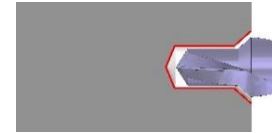


3. SXP - front grooving cutter

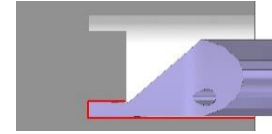


4. SDR - radius internal grooving cutter

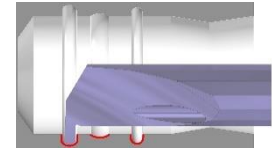

5a. SDU/SDV - threading cutter-partial and solid profile

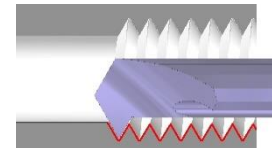

5b. WHC/WHS - thread whirler

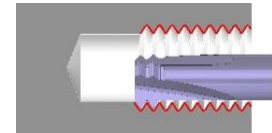

6. Tools for manufacturing of special profiles to customer specification

